







NOTE FOR HIGH ACCURACY MEASUREMENT ( ± 3mm or better) It is important that the installation is done according to iso and api recomendation

\* The Still pipe should be supported by a trunnion or hinge connected to the bottom course

- \* THE STILL PIPE AND THE SLIDING GUIDE SHOULD BE DESIGNED TO ALLLOW VERICAL FREE MOVEMENT OF THE STILL PIPE WHEN THE TANK SHELL BULGES OR MOVES VERICALLY.

FOR FUTHER INFORMATION SEE
\*ISO/OIS 4266-1 "PETROLEUM AND LIQUID PETROLEUM PRODUCTS - MEASUREMENT OF LEVEL AND TEMPERATURE
IN STORAGE TANKS BY AUTOMATIC METHODS-"
\*API "MANUAL OF PETROLEUM MEASUREMENT STANDARDS CHAPTER3-TANK GAUGING SECTION 1B"

i iank Galldind i				THE COPYRIGHT/OWNERSHIP OF THIS DOCUMENT IS AND WILL REMAIN OURS. THE DOCUMENT MUST NOT BE USED WITHOUT OUR AUTHORIZATION OR BROUGHT TO THE KNOWLEDGE OF A THIRD PARTY. CONTRAVENTION WILL BE PROSECUTED. ROSEMOUNT TANK RADAR AB, SWEDEN.					
ROSE	HO!	UNT.	1 51	ANGLE	DOC TYPE		65-071	ISSUE 1	SHEET 1/1
APPROVED BY	WEEK 0325	9261065-0		SCALE —	STILL	PIPE INST	ALLATION		
TP-AJ	0325	REX	FILE A(	AD	TANK	ON DRAWING TITLE			