


numatics	INSTALLATION AND MAINTENANCE INSTRUCTIONS	EN
	INSTRUCTIONS D'INSTALLATION ET DE MAINTENANCE	FR
	INBETRIEBNAHME - UND WARTUNGSANLEITUNG	DE
	INSTRUCCIONES DE PUESTA EN MARCHA Y MANTENIMIENTO	ES
	ISTRUZIONI DI MESSA IN SERVIZIO E MANUTENZIONE	IT
	ALGEMENE INSTALLATIE- EN ONDERHOUDSINSTRUCTIES	NL
	INSTALLASJONS- OG VEDLIKEHOLDSINSTRUKSER	NO
	INSTALLATIONS- OCH UNDERHÅLLSINSTRUKTIONER	SE
	ASENNUS - JA HUOLTO-OHJEET	FI
	INSTALLATIONS - OG VEDLIGEHOLDSANVISNINGER	DK
	INSTRUÇÕES DE INSTALAÇÃO E MANUTENÇÃO	PT
	ΟΔΗΓΙΕΣ ΤΟΠΟΘΕΤΗΣΗΣ ΚΑΙ ΣΥΝΤΗΡΗΣΗΣ	GR
	POKRYTY PRO INSTALACI A ÚDRŽBU	CZ
	INSTRUKCJA MONTAŻU I KONSERWACJI	PL
TELEPÍTÉSI ÉS KARBANTARTÁSI ÚTMUTATÓ	HU	
Инструкция по установке и обслуживанию	RU	
ОРНАТУ ЖӨНЕ ҚЫЗМЕТ КӨРСЕТУ НҰСҚАУЛАР	KZ	


TRANSFERT PLATES

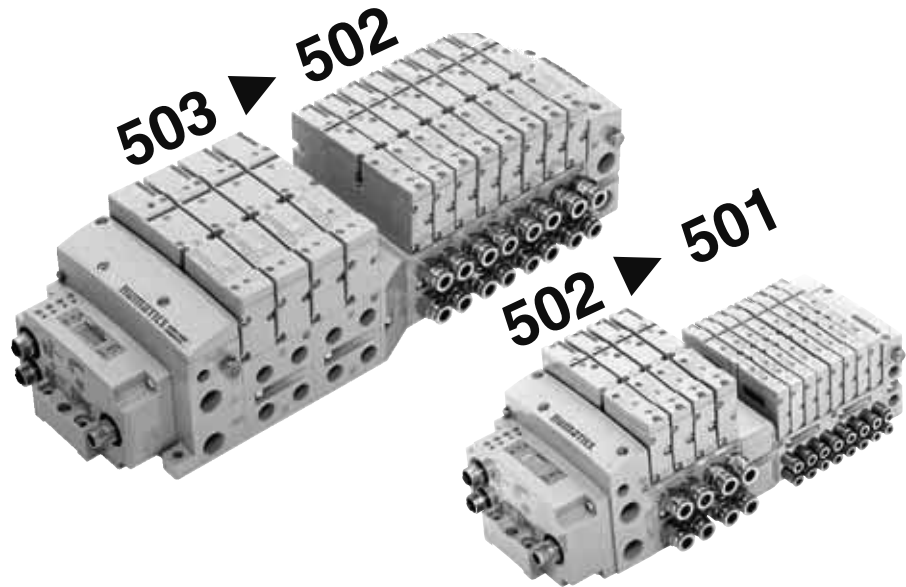

515623-001 / A
Availability, design and specifications are subject to change without notice. All rights reserved.



502 - 501 TRANSFERT PLATES

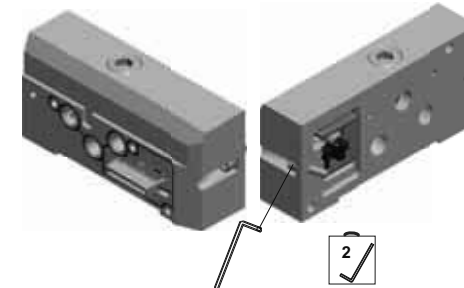

		F
items	N.m	Inch.pounds
	4,6 ±10%	40.7 ±4.1



502 ▲ 501



	G502AT429963002	1 = 1 x G 3/8
US ▶	8502AT429963001	1 = 1 x NPT 3/8



**503 - 502
TRANSFERT PLATES**

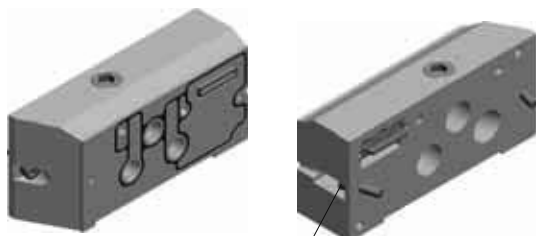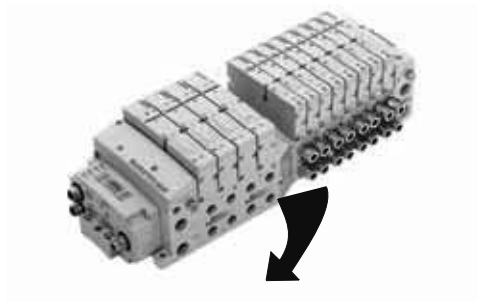

2 ✓

items	N.m	Inch.pounds
	4 ±10%	35.4 ±3.45


Kit

G503AT429964003	1 = 1 x G 3/8
US ▶ 8503AT429964001	1 = 1 x NPT 3/8

503 ▶ 502



**503 - 502
TRANSFERT PLATES
ISO 15407-1 (26 mm - 18 mm)**

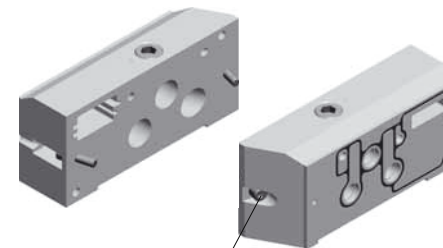

2 ✓

items	N.m	Inch.pounds
	4 ±10%	35.4 ±3.45

Kit

G503AT429964004	1 = 1 x G 3/8
US ▶ 8503AT429964002	1 = 1 x NPT 3/8

503 ISO M12 ▶ 502 ISO M12