



## NEOTECHA PFA LINED BALL VALVES - TYPE NTB/NTC/NXR/SNB/SNC (DISCONTINUED) OPERATING AND SAFETY INSTRUCTIONS

These products are now discontinued

Before installation, these instructions must be fully read and understood

### Hazard potentials

- Disregarding of instructions
- Improper use of product
- Insufficiently qualified personnel

Ensure that valve materials are compatible with the pipeline fluid.

Valve application to be within the pressure/temperature limits indicated in the P/T diagram of the Product Manual.

If in doubt contact your Emerson sales representative.

Check the valve's functionality on a regular basis.

For end-of-line service, please check the details in the Maintenance and Installation Instructions.

### PRECAUTIONS

#### WARNING

For safety reasons, it is important to take the following precautions before you start work on the valve:

1. Personnel making any adjustments to the valves should utilize suitable equipment. All required personal protection means should be worn.
2. Caution must be taken during installation and full responsibility lies with those responsible for the complete installation. In any case, the local safety regulations must be respected.
3. The line must be depressurized before installing the valve. In case of dangerous pipeline fluids, the pipeline should be drained and flushed properly with an appropriate cleaning fluid.
4. Only personnel trained in all aspects of manual and mechanical handling techniques must carry out handling of all valves.
5. Misuse of the valve is not allowed. For example: the valve, handles, actuators or other parts may not be used as 'climbing tools'.

6. Pressure and temperature ratings of the valve must be adhered to and need to be checked with the system specifications. See the Maintenance and Installation Instructions for P/T diagrams.
7. Ensure that valve materials are compatible with the pipeline fluid.
8. Detailed information for installation and maintenance is available.

### INSTALLATION

1. Handling and lifting should be performed according the Maintenance and Installation Instructions.
2. All valves are bi-directional unless fitted with a Flow Direction Arrow. If a directional arrow is fitted then the valve must be installed with the arrow pointing in the direction of the flow.
3. For detailed installation instructions refer to the Maintenance and Installation Instructions for the specific product.
4. Do not use the valve to spread the flanges.
5. In case the valve is used as spool piece during erection of piping, do not finish weld the flanges to the pipes with the valve bolted between the flanges as this will result in serious heat-damage to the seat.
6. Valve operation should be checked for open - close positions.

DISCONTINUED

# NEOTECHA PFA LINED BALL VALVES - TYPE NTB/NTC/NA/SNB/SNC (DISCONTINUED)

## OPERATING AND SAFETY INSTRUCTIONS

---

### MAINTENANCE

---

**!! Read all warning labels fitted to the valve before operation or maintenance !!**

- Check the valve's functionality on a regular basis.
- No additional routine maintenance is required.

### REPAIR

---

**⚠ WARNING**

*The line must be depressurized before carrying out any repairs to the valve. In case of dangerous pipeline fluids, the pipeline should be drained and flushed with an appropriate cleaning fluid. Failure to do so may cause serious personal injury and/or equipment damage. Before disassembling the valve ensure the valve has been decontaminated correctly from any harmful gasses or liquids and that it is within a safe temperature range for handling. Personnel making any adjustments to the valves should utilize suitable equipment. All required personal protection means should be worn. Only qualified personnel trained in all aspects of manual and mechanical handling techniques must carry out lifting and handling of valves.*

VCOSI-01967-EN © 2017 Emerson Electric Co. All rights reserved 01/17. Neotecha is a mark owned by one of the companies in the Emerson Automation Solutions business unit of Emerson Electric Co. The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are the property of their prospective owners.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available upon request. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.

Emerson Electric Co. does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson Electric Co. product remains solely with the purchaser.

Emerson.com/FinalControl

DISCONTINUED