# Fisher™ 1008 Handwheel Actuator

The Fisher 1008 manual handwheel actuator is used in applications that require a throttling type of control valve that can be manually operated and set. This actuator can be used on nearly all standard globe-style or angle-style control valve body assemblies. No special valve body adaptor is required for use with the 1008 actuator, so that future conversion from manual to automatic control can be accomplished at minimum cost.

The 1008 actuator is capable of giving precise manual throttling control. A travel indicator mounted on the actuator yoke provides a visual indication of valve plug position at all times. A dial type valve plug position indicator is also available as optional equipment.



Fisher 1008, Size 80 Actuator

# **Features**

- Easy to Install and Maintain—For sizes 30, 40, and 50, the yoke is attached to the valve body with a forged steel hammer locknut (figure 1 shows a typical locknut attachment). For the size 80, the yoke is bolted to the valve body. The handwheel mechanism on all sizes is totally enclosed.
- Easy to Operate—Regardless of the valve plug action, counterclockwise rotation of the handwheel always opens the valve. In size 40 and larger, two ball bearings are used in the handwheel assembly to facilitate rotation. A spring loaded ball detent in the handwheel prevents it from rotating due to vibration.

■ Accurate Valve Plug Positioning—The valve stem does not revolve, assuring the same seating surface with each full stroke. Also, the yoke construction ensures that the force required to turn the handwheel cannot be transmitted to the valve body. Sizes 30, 40, and 50 actuators can be furnished with a Tejax Model A35 valve position indicator (figure 2). This indicator enables you to turn the handwheel to the desired position without guesswork. The dial on the indicator is divided into turns and fractions of turns so that you can return to a predetermined valve setting quickly and easily.





# Specifications

# **Available Configuration**

Manual-only handwheel actuator for use with sliding-stem valves

#### **Actuator Size**

See table 1

#### **Stem and Yoke Boss Diameters**

See table 1

#### **Maximum Stem Travel**

See table 1

#### **Maximum Usable Thrust**

See table 1

#### **Handwheel Rotation**

Clockwise handwheel rotation closes the valve For sizes 30, 40, and 50: ■ Left hand screw assembly for push-down-to-close; ■ Right hand screw

assembly for push-down-to-open valve

For size 80: Handwheel assembly is reversible so that it can be arranged for clockwise-to-close rotation.

# **Maximum Handwheel Force**

See table 1

## Handwheel Revolutions per Inch of Stem Travel

See table 1

1. When a Tejax indicator is used, the actuator must be installed in a horizontal position.

## **Construction Materials**

Sizes 30, 40, and 50:

Handwheel:

Size 30: Ductile Iron Sizes 40 and 50: Cast Iron

Yoke: Ductile Iron

Acme Power Nut: Stainless Steel (Not used on Size 30)

Acme Power Screw: Size 30: Stainless steel

Size 40 and 50: Aluminum Bronze

Size 80:

Handwheel: Cast Iron Yoke: Cast Iron

Worm Gear: Phosphor Bronze

Worm Shaft: Steel Stem Screw: Steel

## **Approximate Weight**

Size 30: 6.4 kg (15 lb) Size 40: 15.9 kg (35 lb) Size 50: 20.4 kg (45 lb) Size 80: 45.4 kg (100 lb)

## **Options**

■ Sizes 40 and 50: Set screw to permit locking handwheel in place

■ Sizes 30, 40, and 50: Tejax Model A35 valve stem position indicator<sup>(1)</sup>.

Indicator dial calibrated in turns and fractions of turns

Table 1 Actuator Size Selection and Specifications

| ACTUATOR<br>SIZE | BOSS SIZE          | STEM DIAMETER | MAXIMUM<br>USABLE THRUST | MAXIMUM FORCE ON HANDWHEEL | MAXIMUM<br>TRAVEL | REVOLUTIONS<br>PER mm OF       |
|------------------|--------------------|---------------|--------------------------|----------------------------|-------------------|--------------------------------|
|                  | mm                 | mm            | N                        | N                          | mm                | TRAVEL                         |
| 30               | 54                 | 10            | 7340                     | 173.5                      | 19                | 0.3                            |
| 40               | 71                 | 13            | 13122                    | 160                        | 51                | 0.3                            |
| 50               | 90                 | 19            | 29581                    | 276                        | 51                | 0.3                            |
| 80               | 127 <sup>(1)</sup> | 25            | 50042                    | 423                        | 76 <sup>(2)</sup> | 0.4                            |
|                  |                    | 32            | 75620                    | 623                        |                   |                                |
|                  | Inch               | Inch          | Lbf                      | Lbf                        | Inch              | REVOLUTIONS PER INCH OF TRAVEL |
| 30               | 2-1/8              | 3/8           | 1650                     | 39                         | 0.75              | 8                              |
| 40               | 2-13/16            | 1/2           | 2950                     | 36                         | 2                 | 8                              |
| 50               | 3-9/16             | 3/4           | 6650                     | 62                         | 2                 | 8                              |
| 80               | 5(1)               | 1             | 11250                    | 95                         | 3(2)              | 10                             |
|                  |                    | 1-1/4         | 17000                    | 140                        |                   |                                |

Figure 1. Fisher 1008, Size 30 Actuator Mounted on ES Valve

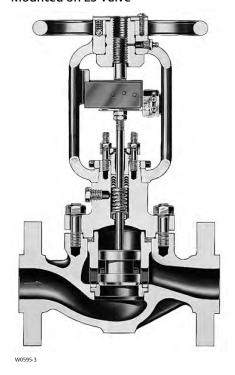


Figure 2. Tejax Model A35 Valve Position Indicator



# **Ordering Information**

# **Application**


When ordering, specify:

- 1. Valve body type or design, size, and stem diameter.
- 2. Valve plug action, push-down-to-open or push-down-to-close.
- 3. For sizes 30, 40, and 50: Tejax model A35 dial indicator, if required.
- 4. For size 40 and 50: Set screw handwheel lock.

Table 2. Overall Dimensions

| ACTUATOR SIZE | E   |        |  |
|---------------|-----|--------|--|
| ACTUATORSIZE  | mm  | Inches |  |
| 40            | 386 | 15.19  |  |
| 50            | 448 | 17.63  |  |

Figure 3. Overall Dimensions (also see table 2)

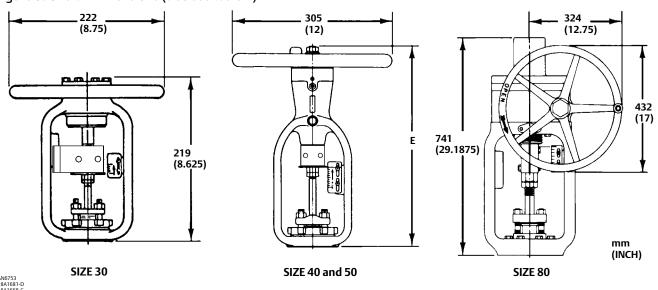

Neither Emerson, nor any of their affiliated entities assumes responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use, and maintenance of any product remains solely with the purchaser and end user.

Fisher is a mark owned by one of the companies in the Emerson business unit of Emerson Electric Co. Emerson, and the Emerson logo are trademarks and service marks of Emerson Electric Co. All other marks are the property of their respective owners.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available upon request. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.

**Emerson** 

Marshalltown, Iowa 50158 USA Sorocaba, 18087 Brazil Cernay 68700 France Dubai, United Arab Emirates Singapore 128461 Singapore

www.Fisher.com

