### **Rosemount TGU 58**

## Tank Radar Gauge, Parabolic Antenna





Rosemount TGU 58 Tank Radar Gauge, Parabolic Antenna is a marine non-contacting radar level gauge that is integrated in the Rosemount Cargo Monitoring System (CMS). It is designed to be used in harsh conditions on tankers and offshore installations, and has a superior robustness and accuracy under all tank conditions. TGU 58 can have up to three independent measurement channels in the same unit.

- 26 GHz FMCW tank radar gauge, with advanced signal processing, high bandwidth and optimized parabolic antenna
- Accurate and reliable measurement that keeps you operating under adverse conditions in tank
- Stainless steel with Mo>2.5% makes the unit resistant against all commonly transported cargos
- Seamless in-flange integrated antenna

- Easy to install, light weight and narrow beam
- Optional integrated vapor pressure sensor
- Optional level redundancy measurements
- Optional independent high level and overfill alarm measurements

# **Product Discontinued**



Rosemount TGU 58 November 2016

### **Description**

The Rosemount TGU 68 Tank Radar Gauge, Parabolic Antenna, is suited for installation on general tanks with a tank height of up to 35 meter. The unit is equipped with a parabolic antenna, and is mounted on an 8" deck socket.

The gauge is intrinsically safe and operates based on 26 GHz FMCW radar technology. The advanced signal processing, the high bandwidth and the optimized parabolic antenna gives a superior robustness in measurement. The TGU 68 keeps operating under the most difficult conditions in the tank and on the deck.

The narrow beam of  $\pm 2^{\circ}$  makes it easy to install on tanks.

#### Connections

One digital bus connection to the Rosemount SCU 51 Supply and Communication Unit in the control room per level measurement channel.

Optional digital bus connections to:


- Rosemount TMU 51/53 Temperature Measuring Units
- Rosemount TGD 51 Tank Gauge Display
- Rosemount WTU 51 Tank Cleaning Monitoring

### **Vapor Pressure Option**

An optional vapor pressure sensor can be mounted as an integrated part inside the TGU 58. The vapor pressure sensor provides the relative pressure inside the tank.


#### Redundancy and High Level / Overfill Options

The gauge is as standard equipped for level measurements, but is prepared for optional redundant level or independent high level or overfill alarm measurements.

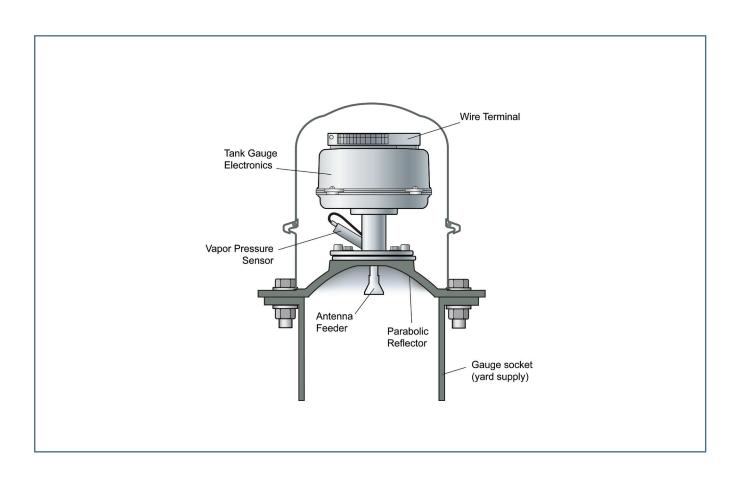

November 2016 Rosemount TGU 58

### **Rosemount Cargo Monitoring System**

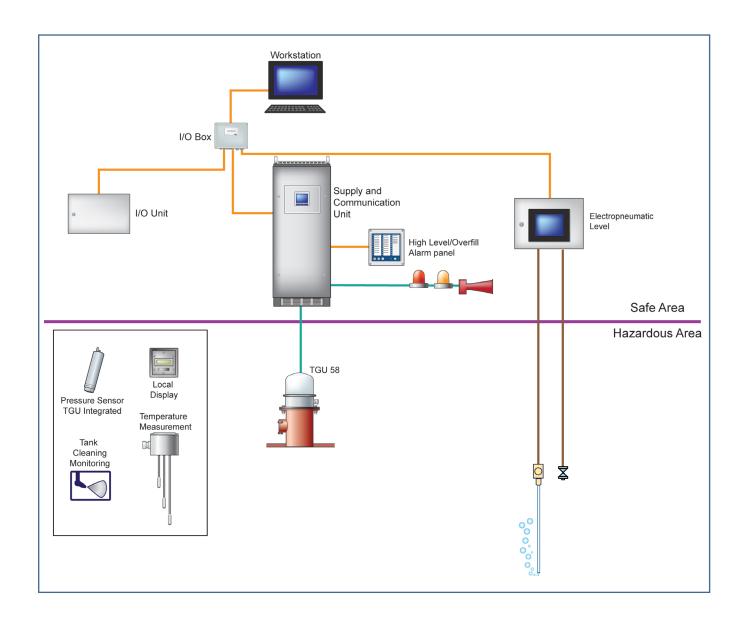

Rosemount TGU 58 November 2016

#### **Radar Principles**


The FMCW radar used in Rosemount CMS emits radar waves continuously at a known range of frequencies. The transmitted radar frequency is increased over a time creating a sweep. The reflected signals is then mixed with the transmitted signals creating a low frequency signal that is proportional to the product level. The signals are digitally processed and presents a very accurate reading of the distance to the product level.


### The main advantage for using radar for tank gauging are:

- Radar waves are extremely robust to any conditions in the tank.
- Radar waves are generally not affected by the atmosphere above the product in the tank
- The only part located inside the tank is the antenna without moving part
- · High reliability
- High accuracy
- With Rosemount CMS, the Tank Gauge electronics can easily be services and replaced during closed tank conditions.

### **Deck Socket**

The TGU 58 is as standard mounted on a TGS 58 Tank Gauge Socket with a service opening for easy cleaning of the antenna. The TGS 58 Tank Gauge Socket is normally supplied by yard.

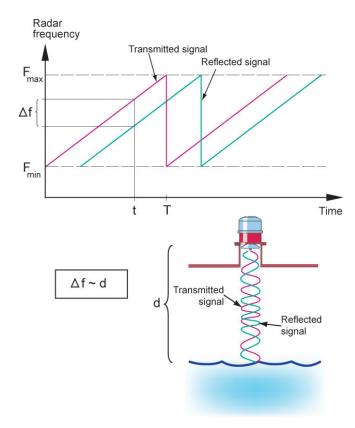

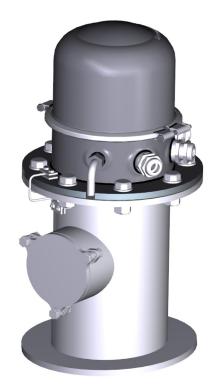

Rosemount TGU 58 Tank Radar Gauge, Parabolic Antenna on Rosemount TGS 58 Tank Gauge Socket

November 2016 Rosemount TGU 58


# **Technical Specification**

Rosemount TGU 58			
General Specification			
Antenna type	Parabolic antenna		
Measuring range	0 to 35m		
Instrument accuracy	±2 mm		
FMCW centre frequency	26 GHz		
Half power beam width	±2° (lobe angle from antenna axis) ¹		
Operating temperature in tank	-40 to +100 °C		
Operating pressure in tank	100 to +500 mbar		
Electrical Specification	1		
Cable to control room	Up to 3 cables with two or three twisted pairs with common shield.  Max length approximately 400 m		
Number of cable inlets	1 to 3		
Cable diameters	6 to 21 mm		
Field bus	Proprietary intrinsically safe		
Microwave output power	<1mW		
Mechanical Specification			
Flange	Suitable for mounting on JIS 5K-200, DN200		
Weight	16.5 kg (35 lbs.)		
Material facing tank atmosphere	Stainless steel 316L with Mo>2.5%, PTFE, Fluorosilicone (standard) or Kalrez 6375 (optional)		
Material facing deck	Stainless steel 316L		
Deck socket <sup>2</sup>	350 mm with service opening 500 mm with service opening		
Environment Specification			
Ingress protection	IP 66/67		
Ambient temperature	-40 to +70 °C		
Humidity	0 - 100% relative humidity		
Vapor Pressure Option			
Operating range	-100 to 900 mbar		
Instrument accuracy	±3 mbar		
Material facing tank atmosphere	Stainless steel 316L and Alloy C276		
Approvals			
Marine type approvals	ABS, BV, CCS, DNV-GL, KR, LR, NK, RINA		
Explosion protection	Intrinsically safe:		ATEX: (x) II 1G Ex ia IIC T4 Ga IECEx: Ex ia IIC T4 Ga INMETRO: Ex ia IIC T4 Ga

<sup>1)</sup> For details see Reference Manual

<sup>2)</sup> Normally yard supply

## **Dimensional Drawings**

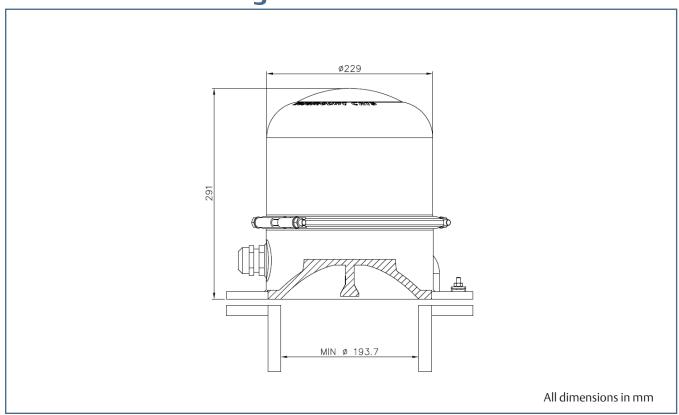

©2016 Emerson Automation Solutions. All rights reserved.

The Emerson logo is a trademark and service mark of Emerson Electric Co. Rosemount and the Rosemount logotype are registered trademarks of Rosemount Inc. TankRadar is a trademark of Rosemount Tank Radar AB. Rosemount Tank Radar AB is a member of the Emerson family of companies. All other marks are the property of their respective owners.

The contents of this publication are presented for information purposes only, and while effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, expressed or implied, regarding the products or services described herein or their use or applicability. Standard Terms and Conditions of Sale can be issued by contacting Rosemount Tank Radar AB. We reserve the right to modify or improve the designs and specifications of our products at any time without notice. Rosemount Tank Radar AB accepts no responsibility for any errors that may appear in this publication.

### **Emerson Automation Solutions**

Rosemount Tank Radar AB Box 150 SE-435 23 Mölnlycke T +46 31 337 00 00 F +46 31 25 30 22

www.Emerson.com/marine

