

Rosemount™ 3493 LOGView

Software Version 1.21



Contents

Introduction.....	3
LogView software installation.....	4
Collect data.....	5
Saving data.....	6
Open data.....	8
Table.....	9
Chart.....	10
Print.....	11
Site database.....	12
Password protection.....	14
Help.....	15

1 Introduction


Rosemount 3493 LOGView is a software package that works with the Rosemount 3493 Data Logging System.

LOGView allows the user to download the stored data from the Rosemount 3493 to the user's computer. The data available includes up to 7000 sample values, 60 daily totals, and 60 maximum daily flow rates.

Within the LOGView software, the downloaded data can be used to produce reports, summaries, and charts, each tailored to the user's requirements.

Many of the functions available in LOGView can be selected in more than one way: by cursor, menu, function key, or dedicated button.

Figure 1-1: Rosemount 3493 LOGView

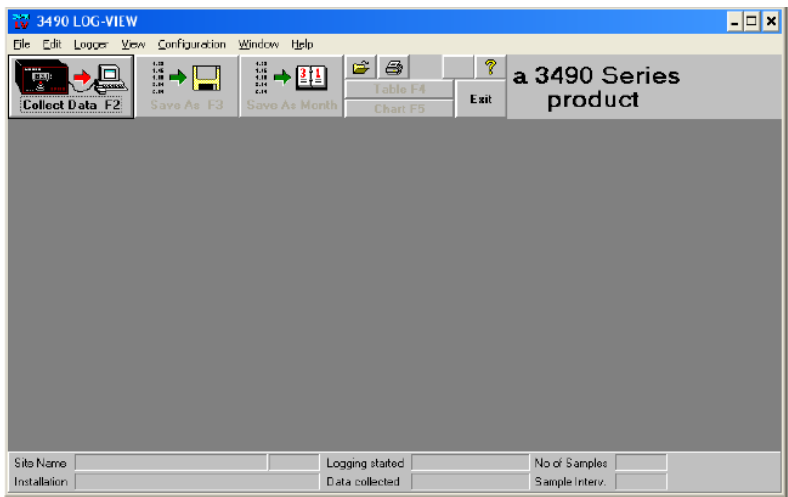

2 LogView software installation

2.1 Download the LogView software

Procedure

1. Go to Emerson.com/Rosemount3493.
2. Scroll as needed to the green menu bar and click **Documents & Drawings** → **Training & Demonstrations**.
3. Download and unzip the Rosemount LogView package.

2.2 Install the LogView software

Prerequisites

Supported operating systems: Up to Windows 7 (32-bit)

Procedure

1. Double-click **setup.exe** to start the installation.
2. Select **Start Setup**.



3. In the **Install To:** box, type the desired installation location. The default location is `C:\LOGVIEW`.



4. Select **Continue**. The files are then automatically installed on the PC. A LOGView icon will display in the **Start** menu.

3 Collect data

Procedure

1. Connect the PC to the Rosemount 3493 Data Logging System by using the communications lead provided.
If a different connection lead is required, see [Connection details](#).
2. Start LOGView from the Windows menu.
3. Click the **Collect Data** button or press **F2** to collect all of the data from the Rosemount 3493.



Postrequisites

After collecting the data, it may be saved in a CSV file.

3.1 Connection details

A cable is supplied with the Rosemount 3493 Data Logging System for connection to a PC serial COM port. However, see [Table 3-1](#) if a custom connection is required.

Figure 3-1: Connection to a PC

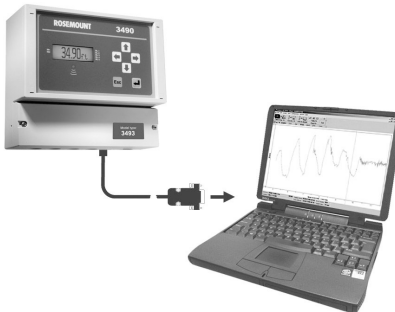


Table 3-1: Connection Lead

Signal function	Terminal block on 3493	PC RS232 Port 9-way connection	PC RS232 Port 25-way plug
Logger output	5 (Tx)	PIN 2	PIN 3
Logger input	4 (Rx)	PIN 3	PIN 2
Ground	6 (0V)	PIN 5	PIN 7

4 Saving data

There are two formats for saving data. The first option is as the standard CSV format, in which case all the data collected is saved as one file. The second format saves the data in a monthly CSV format, and automatically joins together all the data from one month in one file. All of the LOGView data is in Comma Separated Values (CSV) format.

4.1 Save data as CSV file format

After you have collected data from the logger you should save it in a CSV File.

Procedure

Click the **Save As** button or select **File** → **Save Data As CSV File**.



LOGView automatically offers you a file name that consists of the unique ID and a three digit number. That number is the next after the highest number found in the CSV sub-directory.

Data is saved with the current international settings of your PC.

4.2 Write/add to monthly CSV file

A monthly file can be automatically built up from a number of data collections.

If a monthly file is not complete, you can add data from subsequent CSV files that contain data from that month.

Note

You can only append data at the end of a file, not at the beginning or in the middle.

Procedure

Click the **Save as Month** button or select **File** → **Write/Add to Monthly CSV File**.



A dialogue box is displayed to give you information on which files will be created. It includes a **Monthly CSV File Actions** list box.

4.2.1 Monthly CSV file actions box

This box shows all monthly file actions that could be possible for the current data. After each file one of four possible comments is displayed:

- No action
- Add data to file
- Create new file
- Error in file

4.2.2 Monthly CSV file names

LOGView automatically builds up the file names from the Unique ID (5 digits), Year (2 digits) and one letter for the month (A= January etc.).

When saving a data file which starts in February and ends in April, the dialogue box may say:

0000213B.CSV = February 2013: No action

0000213C.CSV = March 2013: Add data to file

0000213D.CSV = April 2013: Create new file

5 Open data

Menu bar

File → Open Data

Toolbar

The Open Data dialogue box is displayed to open an existing CSV file. LOGView keeps track of the documents you last worked on. You can quickly open one of the last 6 files used by selecting it from the bottom of the File menu. Alternatively it can be opened in the normal Windows manner.

An example of a typical data file has been included in the CSV files sub-directory - it is named example.csv.

This example file was created with dates and numbers in the standard UK format. If the PC is set to a different format the file may still be opened by using the Open Data International option from the File menu. A dialogue box will prompt for alternative date and number formats.

6 Table

Menu bar

View → Table

Toolbar


 Table F4

Select the table command/button to select the table window. Once data has been collected or loaded by opening a file, it can be tabulated in several different ways.

Sample table

The Sample table contains the transferred data consisting of sample numbers, dates and times of samples, sample values and flags. The flags tell you whether there were any of the following actions within that sample period:

FL Fast Logging

LE Lost Echo or Fault

LE + FL Lost Echo and Fast Logging

This table also shows information about a Power failure.

Header table

This table contains the information from the Rosemount 3493 header block or the CSV file header block.

Other table

This table gives information about Totalizer, Total Flow and Max. Flow values.

Day table (summary)


This table gives information about daily summaries. Summaries include values of Night Flow. The duration of the night may be defined in Summary in the Configuration menu

Day/Month table (summary)

This table shows all daily summaries for one month in one table.

Month table (summary)

This table shows the summary of one month.

Tables may be navigated by clicking the right mouse button or by selecting , or simply by using cursor keys.

7 Chart

Menu bar

View → Chart

Toolbar



Select the chart command/button to select the chart window. In this window the sample data or daily totals may be charted against a variety of timebases.

The different chart types are:

Samples chart

Line chart of the sample data.

Total chart

Bar chart of the daily totals.

Daily chart

Chart of sample data for 24 hours. The 24-hour period does not necessarily have to start at midnight. For example, you can chart data from 08:00 to 08:00 the next morning.

Weekly chart

Chart of sample data or totalizer data for 7 days. The first day does not necessarily have to be Monday. For example, you can chart data from Wednesday to the following Tuesday.

Monthly chart

Chart of sample data or Total data for one calendar month.



(Chart bar)

Click the **Other** button or press F7 to get a list of all available chart types (i.e., Daily chart, Weekly chart, Monthly chart, Between Specified Times chart, Show All chart, and Average day chart).

Average day

This chart is available for the sample data and, for each time of the day, it plots the average value of all the samples in the data file. So, for example, a chart of the typical flow for a month may simply be produced.

The appearance of the charts may be customized by selecting **Configuration** → **Chart** or by clicking the right mouse button. This also allows the addition of maximum and minimum limit lines as well as a cursor line which allows peaks and troughs to be identified accurately.

8 Print

Menu bar

File → Print

Toolbar



Displays the Print Dialogue Box. It is possible to print out any of the tables, charts or summaries outlined below:

Daily Summaries

You can select the days you want to print. The table "Day" and all Sample Data will be printed per Day. Note that a value in a rectangle indicates the number of missing samples due to a power failure.

Monthly Summaries

You can select the months you want to print. The tables "Month" and "Day/Month" will be printed for each month.

Current Chart

Prints the current chart with limit lines (if selected) but without the cursor line. The Current Chart option is disabled (greyed-out) if you have no chart view (window) of the data.

Print Button

The Print button prints the current chart or table. Set up the printer using the preferences option in Windows.

Chart Print Setup

Displays the Chart Print Setup Dialogue Box where the line or bar colour, line width, bar style, and the border width can be changed.

Note

All changeable information can be saved in the configuration file. On leaving LOGView the user is prompted whether changes should be saved. The normal configuration file is called START.INI but others names may be used if more than one configuration is to be stored.

9 Site database

Menu bar

Configuration → Site Database

Figure 9-1 shows the *Site Database Dialogue* window.

Figure 9-1: Site Database Dialogue

Every Rosemount 3493 has a unique ID which it sends to the PC along with the sample data. This ID gives the information to the software about the site which assists in the presentation of the data in charts, tables and print-outs. It is not essential that any data be entered but the fields listed are particularly useful.

- Site Name** Appears on the status bar and on print-outs.
- Installation** Appears on the status bar and on print-outs.
- Sample Unit** Appears on charts, tables and print-outs.
- Totaliser Unit** Appears on charts, tables and print-outs.

Dialogue box options

- Add** To add a new site record to the site database. Therefore you are asked to enter the Unique ID of the Rosemount 3493, followed by the site data.

Delete

To delete a record from the site database, select the **Unique ID** from the list by clicking on its entry in the list box, then press **Delete**.

Note

The site database is saved in the SITEDB.SDB file in the LOGView directory and, if preferred, it can simply be edited or extended using an ordinary text editor.

10 Password protection

Menu bar Configuration → Access

LOGView can be used to Stop or Restart a Rosemount 3493 using the Logger Control function from the Logger menu. This control is password protected. The user password is entered using the Access function from the Configuration menu. Further users may be added and passwords may be changed.

Login Some menu options are protected by user names and passwords. If you select such an option before you have logged in you are asked to login.

Logout To log out the current user.

Change Password This option is designed to allow ordinary users to change their own passwords.

Set Access Displays the Edit Users dialogue box. This dialogue box is designed to enable a 'supervisor' to manage LOGView users.

11 Help

Menu bar

Help → Contents


Toolbar


Executes the LOGView help file and shows the **contents** page. This gives a comprehensive help facility, but throughout LOGView there is context-sensitive help available, either by local **HELP** buttons or by pressing **F1**.



Emerson Automation Solutions

6021 Innovation Blvd.
Shakopee, MN 55379, USA


 +1 800 999 9307 or +1 952 906 8888


 +1 952 949 7001

 RFQ.RMD-RCC@Emerson.com

Latin America Regional Office

Emerson Automation Solutions
1300 Concord Terrace, Suite 400
Sunrise, FL 33323, USA


 +1 954 846 5030


 +1 954 846 5121

 RFQ.RMD-RCC@Emerson.com


Asia Pacific Regional Office


Emerson Automation Solutions
1 Pandan Crescent
Singapore 128461

 +65 6777 8211

 +65 6777 0947

 Enquiries@AP.Emerson.com

 [Linkedin.com/company/Emerson-Automation-Solutions](https://www.linkedin.com/company/Emerson-Automation-Solutions)

 [Twitter.com/Rosemount_News](https://twitter.com/Rosemount_News)


 [Facebook.com/Rosemount](https://www.facebook.com/Rosemount)


 [Youtube.com/user/RosemountMeasurement](https://www.youtube.com/user/RosemountMeasurement)

North America Regional Office

Emerson Automation Solutions
8200 Market Blvd.

Chanhassen, MN 55317, USA

 +1 800 999 9307 or +1 952 906 8888

 +1 952 949 7001

 RMT-NA.RCCRFQ@Emerson.com


Europe Regional Office


Emerson Automation Solutions Europe
GmbH

Neuhofstrasse 19a P.O. Box 1046

CH 6340 Baar

Switzerland

 +41 (0) 41 768 6111

 +41 (0) 41 768 6300

 RFQ.RMD-RCC@Emerson.com


Middle East and Africa Regional Office


Emerson Automation Solutions

Emerson FZE P.O. Box 17033

Jebel Ali Free Zone - South 2

Dubai, United Arab Emirates

 +971 4 8118100

 +971 4 8865465

 RFQ.RMTMEA@Emerson.com

©2021 Emerson. All rights reserved.

Emerson Terms and Conditions of Sale are available upon request. The Emerson logo is a trademark and service mark of Emerson Electric Co. Rosemount is a mark of one of the Emerson family of companies. All other marks are the property of their respective owners.